



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG SYNCMASTER 712N. You'll find the answers to all your questions on the SAMSUNG SYNCMASTER 712N in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SAMSUNG SYNCMASTER 712N**  
**User guide SAMSUNG SYNCMASTER 712N**  
**Operating instructions SAMSUNG SYNCMASTER 712N**  
**Instructions for use SAMSUNG SYNCMASTER 712N**  
**Instruction manual SAMSUNG SYNCMASTER 712N**



**SyncMaster 710T / 910T / 710N / 910N / 510T / 510N / 512N / 515V / 915V  
/ 712N / 912N / 711T / 912T / 913N / 701T**



[Your user manual](#)  
[SAMSUNG SYNCMASTER 712N](#)

**Manual abstract:**

*This may cause malfunction, an electric shock or a fire. If a foreign substance enters the monitor, unplug the power cord and contact the Service Center. Do not use or store inflammable substances near the monitor. This may cause an explosion or fire. Never insert anything metallic into the monitor openings. This may cause an electric shock, fire or injury. Do not insert metal objects such as utensils, wire or drill bits, or things that catch fire easily, such as pieces of paper or matches, into the vents or the headphone or A/V ports on the monitor. This may cause malfunction, an electric shock or a fire. Always contact the Service Center if foreign substances/objects enter into the monitor. If you view a fixed screen for an extended period of time, residual image or blurriness may appear.*

*Change the mode to energy save or set a screensaver to moving picture when you need to be away from the monitor for an extended period of time. Adjust the resolution and frequency to the levels appropriate for the model. Inappropriate resolution may cause undesirable picture quality. 15 inch - 1024 X 768 17,19 inch - 1280 X 1024 Sitting too close to the monitor on a continuous basis may damage eyesight. To ease eye strain, take at least a five-minute break after every hour of using the monitor.*

*Do not use the monitor where it can be exposed to strong vibrations. Exposure to strong vibrations can be a fire hazard and shorten the life of the monitor. When moving the monitor, turn the power switch off and unplug the power cord. Make sure that all cables, including the antenna cable and cables connecting to other devices, are disconnected before moving the monitor. Failure to disconnect a cable may damage it and lead to a fire or an electric shock.*

*SyncMaster 510T / 710T / 910T / 711T / 912T / 701T Please make sure the following items are included with your monitor. If any items are missing, contact your dealer. Unpacking Option 1 SyncMaster 510T / 701T Monitor & Simple stand Option 2 Bottom Monitor & Pivot stand Manual User's Guide, Monitor Quick Setup Guide Warranty Card (Not available in all locations) Cable Dirver, Natural Color software, MagicTune™ software CD D-Sub Cable Power Cord DVI Cable(option) Front 1. 2. Menu button [ ] MagicBright button [ ] Opens the OSD menu. Also used to exit the OSD menu or return to the previous menu. MagicBright is a new feature providing optimum viewing environment depending on the contents of the image you are watching. Currently four different modes are available: Custom, Text, Internet, and Entertain. Each mode has its own pre-configured brightness value. You can easily select one of four settings by simply pressing MagicBright control buttons.*

*1) Text : Normal Brightness For documentations or works involving heavy text. 2) Internet : Medium Brightness For working with a mixture of images such as text and graphics. 3) Entertain : High Brightness For watching motion pictures such as a DVD or VCD. 4) Custom Although the values are carefully chosen by our engineers, the preconfigured values may not be comfortable to your eyes depending on your taste. 3. Brightness button [ ] ] Click here to see an animation clip Adjust items in the menu. If this is the case, adjust the Brightness and Contrast by using the OSD menu. When OSD is not on the screen, Push the button to adjust brightness. 2,3. Adjust buttons [ 4.*

*Enter button [ ] / Source button Activate a highlighted menu item. / Push the 'Source', then Selects the Video signal while the OSD is off. (When the Source button is pressed to change the input mode, a message appears in the center of the screen displaying the current mode -- analog or digital input signal.) Note : If you select the Digital mode, you must connect your monitor to the graphic card's port using the DVI cable. Use this button for auto adjustment direct access.*

*Use this button for turn the monitor on and off. This light glows green during normal operation, and blinks green once as the monitor saves your adjustments. 5. 6. 7.*

*Auto button Power button Power indicator See PowerSaver described in the manual for further information regarding power saving functions..*



[Your user manual](#)

[SAMSUNG SYNCMASTER 712N](#)